


## FITTING INSTRUCTIONS

RESTRICTOR IPA NO. 21233

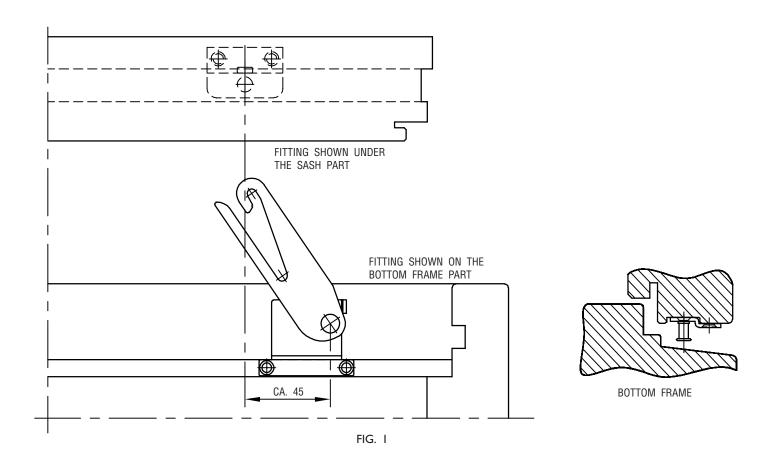

## **OPERATING INSTRUCTIONS:**


- I. OPEN THE WINDOW UNTIL THE RESTRICTOR IS IN POSITION.
- 2. PULL THE SASH IN, APPROXIMATELY 20 MM.
- 3. PRESS THE RESTRICTOR TO THE RIGHT AND OPEN THE SASH.

USE SCREW NO. 3.5.

## **MAINTENANCE:**

THE FITTINGS MUST NOT BE PAINTED.
TEST THE OPERATION AND LUBRICATE THE PIVOT (CENTRE OF ROTATION) FROM TIME TO TIME,
MINIMUM TWICE A YEAR.

## EXAMPLE WOOD PROFILE

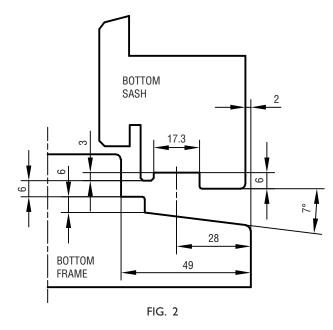

7.07 MV-302